

Digital Switching System Troubleshooting Guide

Problem	Solution
1. Digital Electronic Control Center (DECC) not responding	<ul style="list-style-type: none">a. Verify that DECC has power and ground.b. Remove power and ground from DECC and reinstall to resetc. Verify that DECC Com Cable is connected to switched and DECCd. Verify that battery has a chargee. Remove DECC and replace
2. DECC switches are blinking	<ul style="list-style-type: none">a. Battery needs charging
3. Switches are not responding	<ul style="list-style-type: none">a. Check battery voltageb. make sure Com Cable is plugged into switches an DECCc. Verify that wire is connected into back of switchd. Replace switch
4. Turn on one device and others turn off	<ul style="list-style-type: none">a. Is the device a motor? If so, add a diode on the deviceb. Replace DECC

For Technical Service, call Electro-Motion, Inc. at 1-888-436-4778