


**Technical Service Bulletin #38**  
**MY 2000 Direct Drive Inline Fuse Locations**  
May 4, 2000

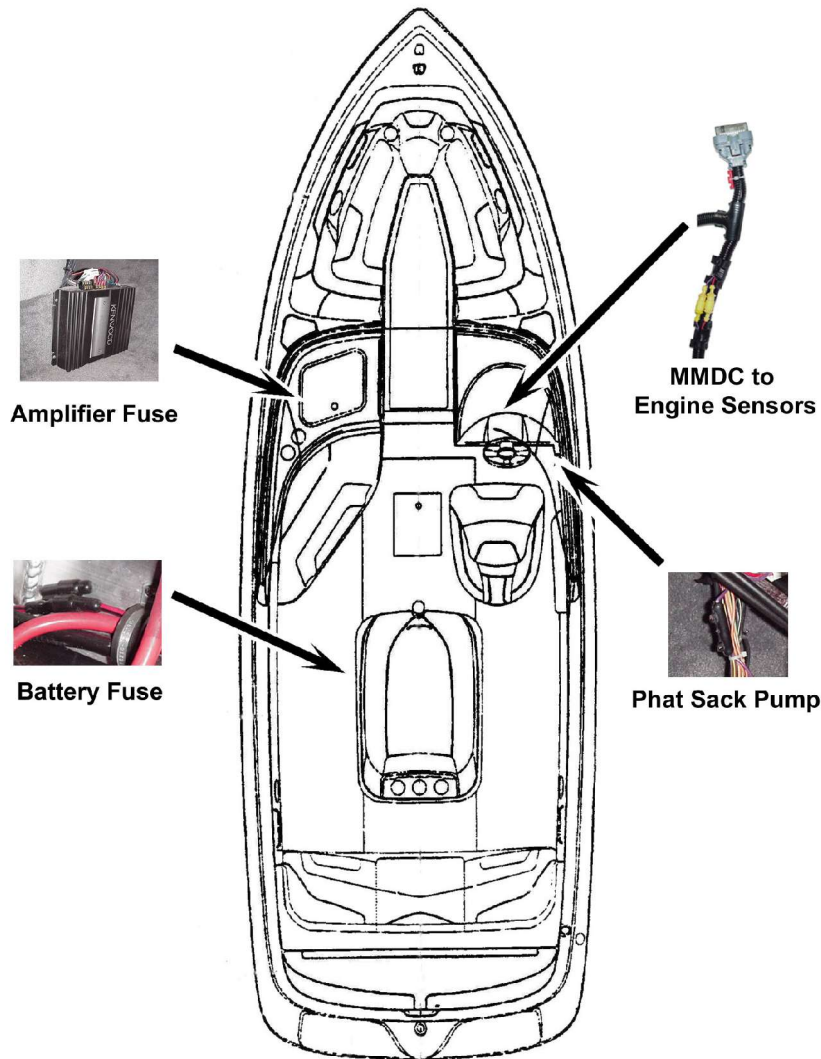

There are currently four standard and one optional inline fuses in the direct drive model Epic boats.

The first inline fuse is a 20-amp fuse located between the battery and the battery switch on the positive (red) battery cable.

The second inline fuse is a 15-amp fuse located under the dash on the black wire between the breaker box and the phat sack pump.

The third and fourth inline fuses are 5-amp fuses located on the cable connecting the MMDC to the engine sensors.

The optional inline fuse is used on any Epic model boat with the Amplifier option. This 30-amp fuse is located on the power wires between the amp and the battery.