

OPERATING INSTRUCTIONS



Fill Instructions:
Operate at slow speeds. Open valve located under floor battery hatch. Valve handle in up position is open. Press fill button and bag should fill in about 5 -10 minutes. When full the water will come out of starboard aft vent. Shut off switch and rotate shut off valve 90 degrees. If valve is left open water will fill bag.



Drain instructions:
Turn on drain switch. Water will drain out starboard thru hull. In about 5 minutes bag will drain, indicated by no water flow out of forward starboard drain. Boat can be at operating at any speed to drain bag.

Caution: Winterize ballast system by removing hoses and verify all hose and bags have been drained.