

ASD's 56-00081 2000 SERIES INSTRUCTIONS

CAUTION: DO NOT USE POSTS ON DECC FOR POWER SOURCE TO OTHER DEVICES. TURN POWER OFF BEFORE UNPLUGGING SWITCHES.


IGN 3A 9 10 11 12 13 14 15 16

TERMINALS 1 THRU 16 ARE OUTPUTS TERMINALS 1A, 2A, 3A, ARE NOT USED

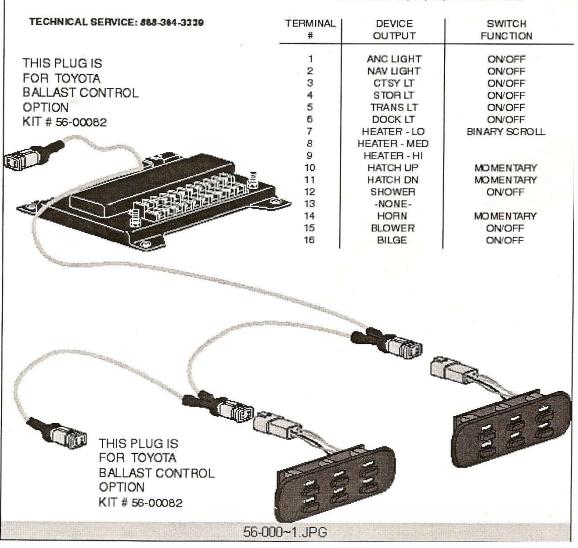

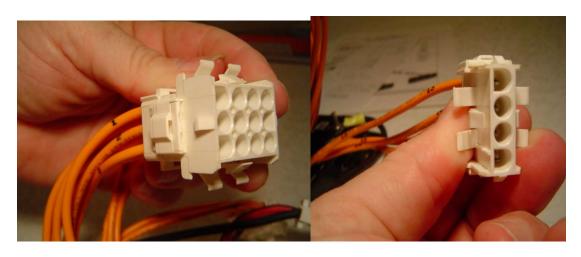

12 Wire Plug	1 4 7 10	13	
_	2 5 8 11	14	
	3 6 9 12	15	4 Wire Plug
		16	

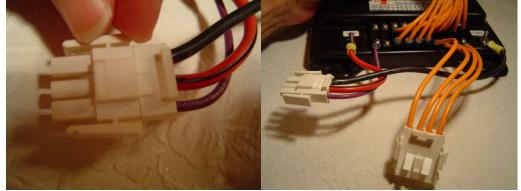

3 Power Wires Black has pin Red in middle Purple

Attached is a quick wiring for early style decc with built in white wires to orange wires with screw terminals.

Recommend ordering MGA0011908 \$311.50 is the computer w/o wires and programmed for all 2000- 2001 models. This model has also larger power lugs. Cut old white wire at decc box and install #6 screw round eyes on each wire. The MGA001190801 is a wire harness with the 12 wires and white plug. (limited few left)