


# Epic Brake Bleeding




# Bleeding the Master Cylinder

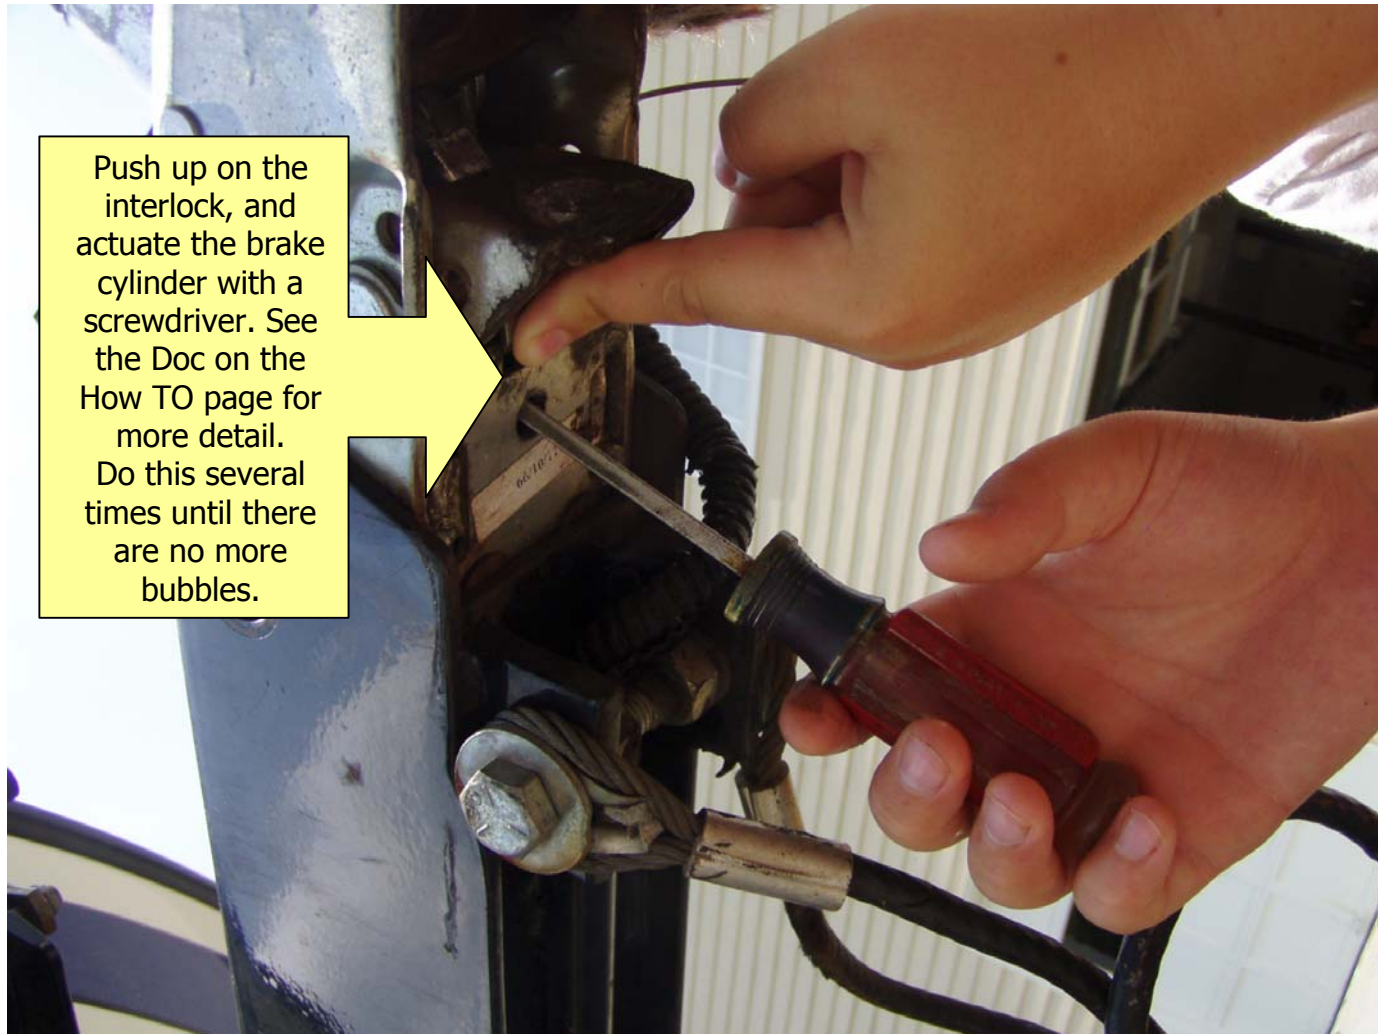

Push up on the interlock, and actuate the brake cylinder with a screwdriver. See the Doc on the How TO page for more detail. Do this several times until there are no more bubbles.



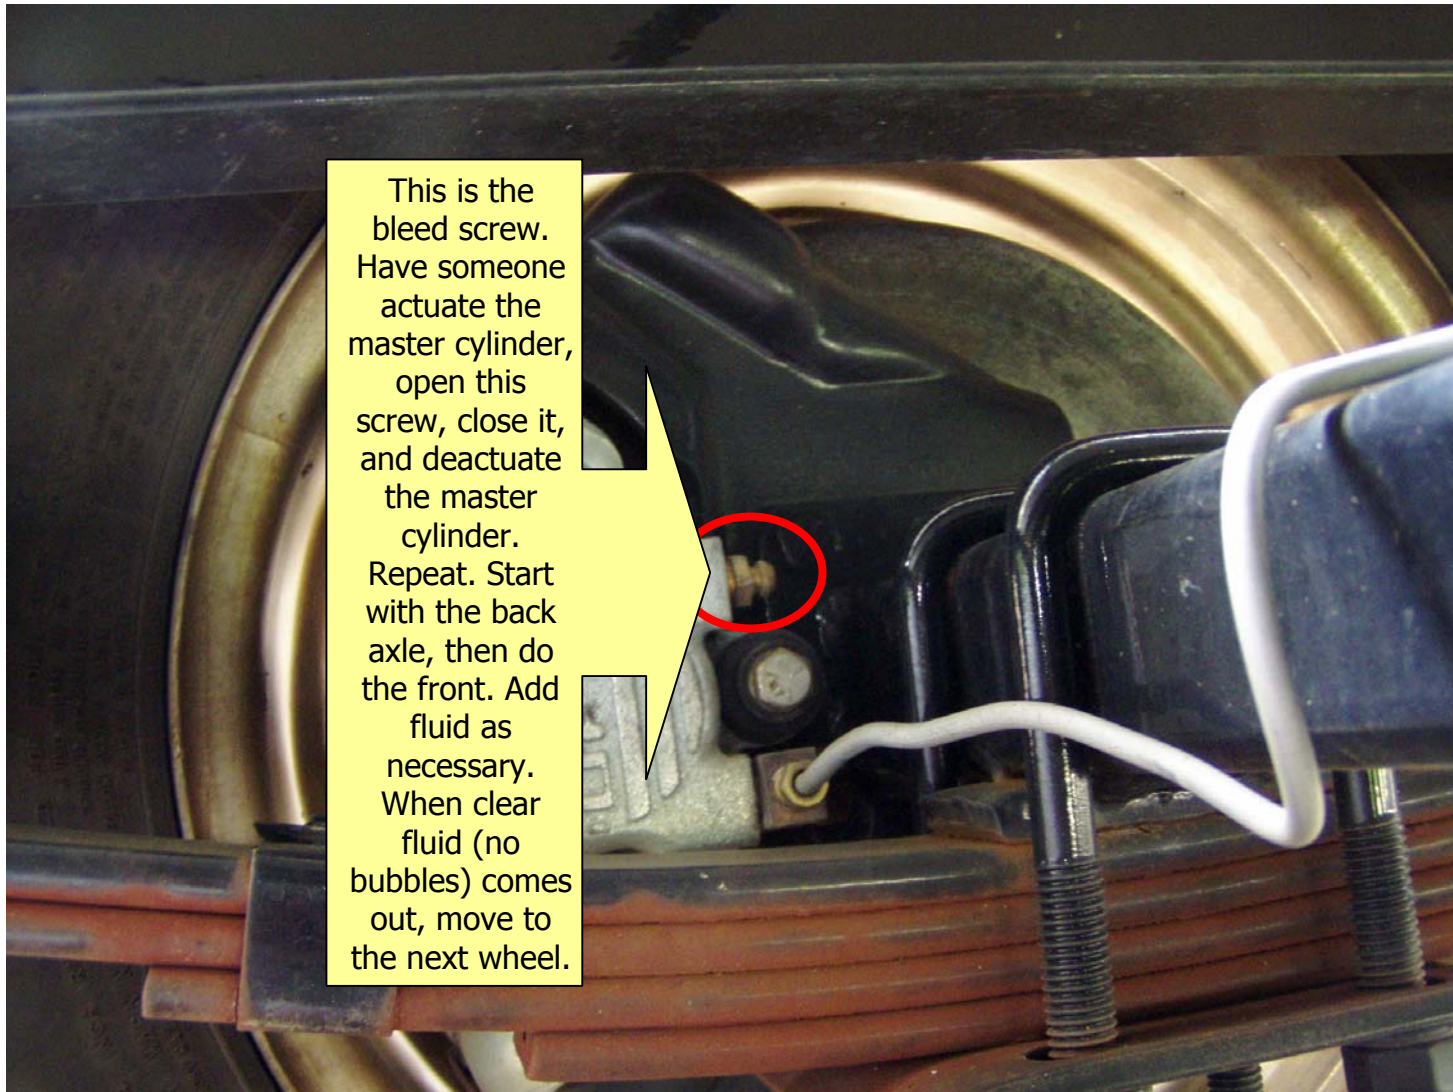

This is the bleed screw. Have someone actuate the master cylinder, open this screw, close it, and deactivate the master cylinder. Repeat. Start with the back axle, then do the front. Add fluid as necessary. When clear fluid (no bubbles) comes out, move to the next wheel.